




RS-13011

400-0857-003


PORTABLE STAND FOR HOSE ROLLERS OR RELOADERS.

PARTS LIST


Right Side Panel

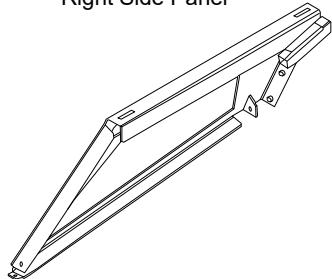


Left Side Panel

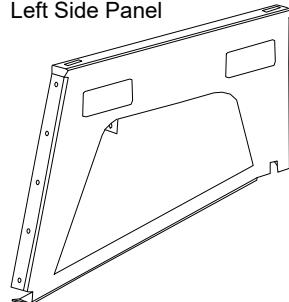


Handle

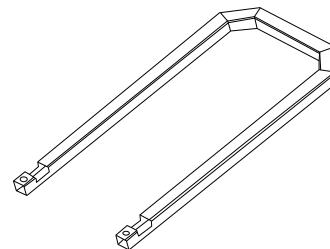


Front Wheels Support

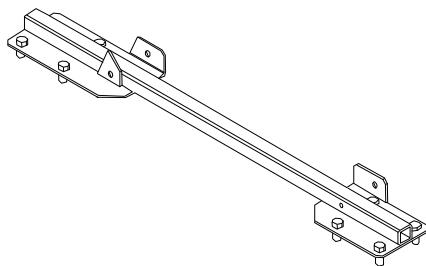


Front Panel

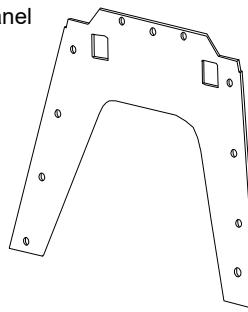


Back Panel

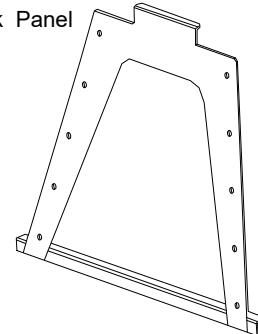


Back Wheels Axle

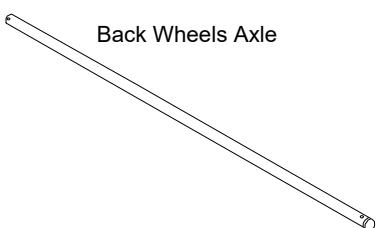


2pcs Front Wheels with Brakes

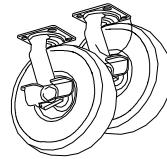


2pcs Back Wheels

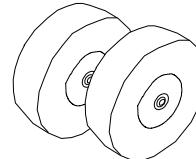


20 pcs 5/16 x3/4" Button Head Screws

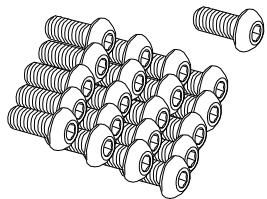


8 pcs Split Lock Washer, 3/8" Screw size

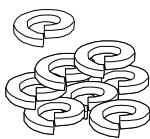

8 pcs Washer for 3/8" Screw

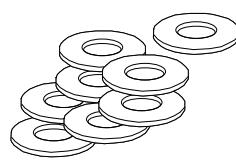


3/16 Allen Hex Screwdriver

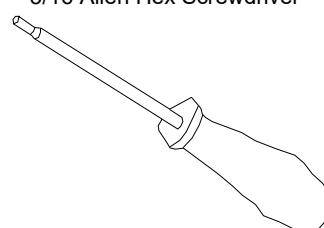


2 pcs 5/16 x1/4" Button Head Screws



 
2 pcs Back Wheels Axle Bushing




2 pcs 3/8 x 1-1/2" Clevis Pin

 

9/16 Wrench

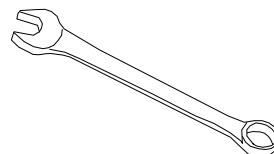

8 pcs 3/8"-16 Nut

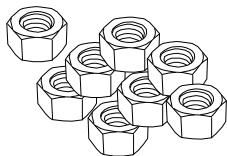


2 pcs Wheel washer




4 pcs 5/32 x 1 Cotter Pin




 2 pcs Quick Release Pins



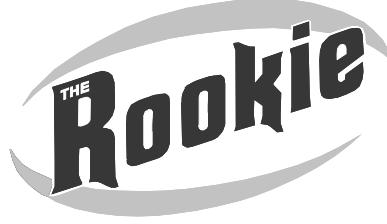

PORTABLE STAND FOR HOSE ROLLERS OR RELOADERS.

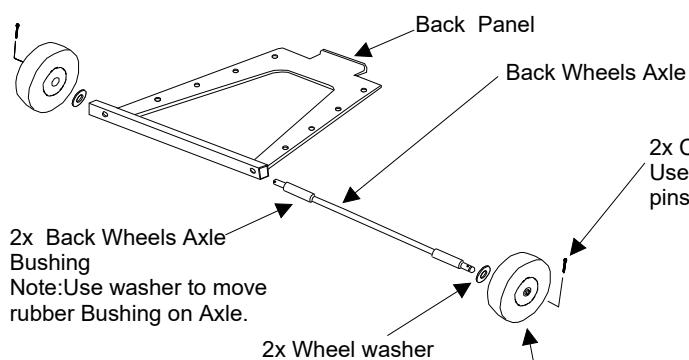ASSEMBLY INSTRUCTIONS**STEP 1**

Back Wheels Axle

2x Back Wheels Axle Bushing

Note: Use washer to move rubber Bushing on Axle.

2x Wheel washer

2x Back Wheels
Note: Install wheels with lubrication ports pointing outside.**STEP 2****DO NOT tighten screws**


Left Side Panel

Right Side Panel




Allen Screwdriver

2 x 5/16 x 1/4" Button Head Screws

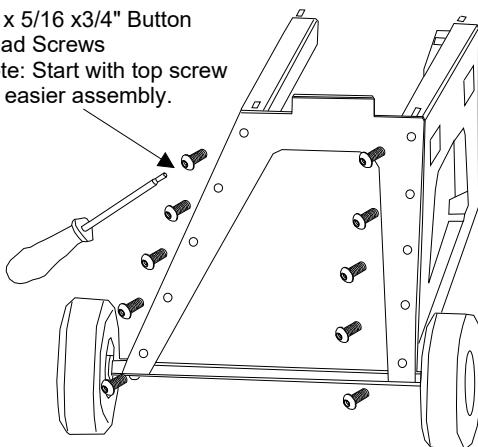STEP 3**DO NOT tighten screws**10 x 5/16 x 3/4" Button Head Screws
Note: Start with top screw for easier assembly.**STEP 4****DO NOT tighten screws**

Do not install screws here.

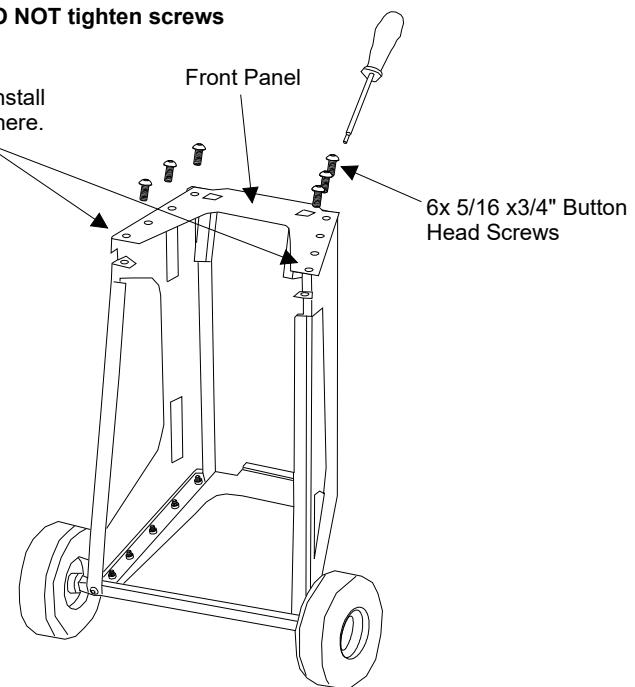



RS-13011


400-0857-003

PORTABLE STAND FOR HOSE ROLLERS OR RELOADERS.

ASSEMBLY INSTRUCTIONS


STEP 4

DO NOT tighten screws

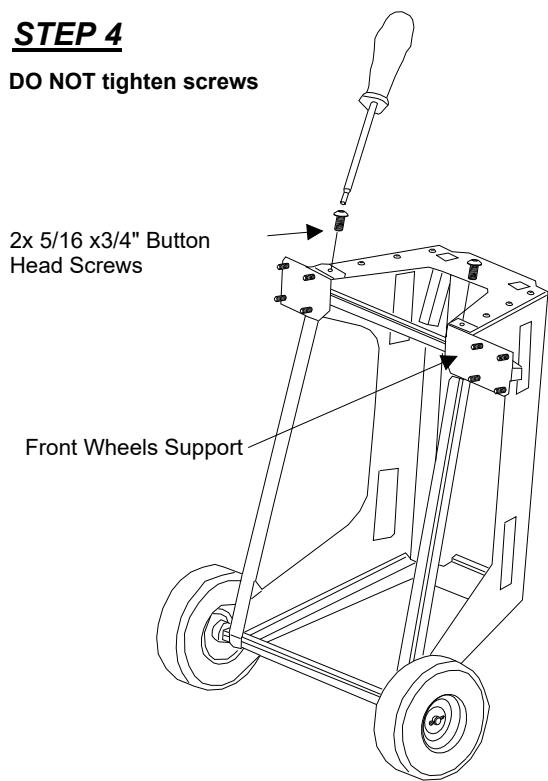


STEP 5


9/16 Wrench

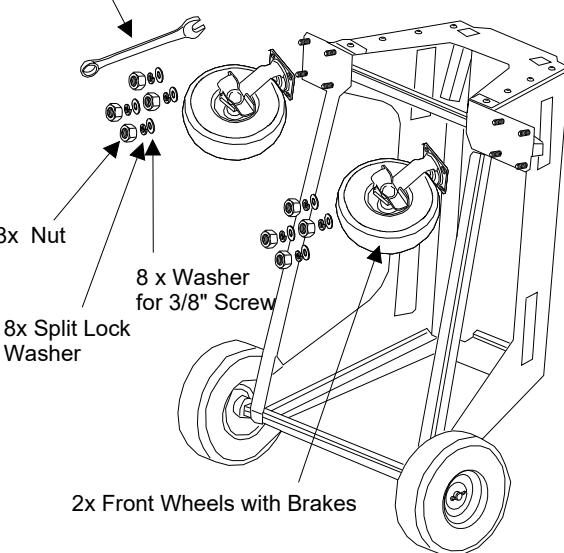

STEP 3

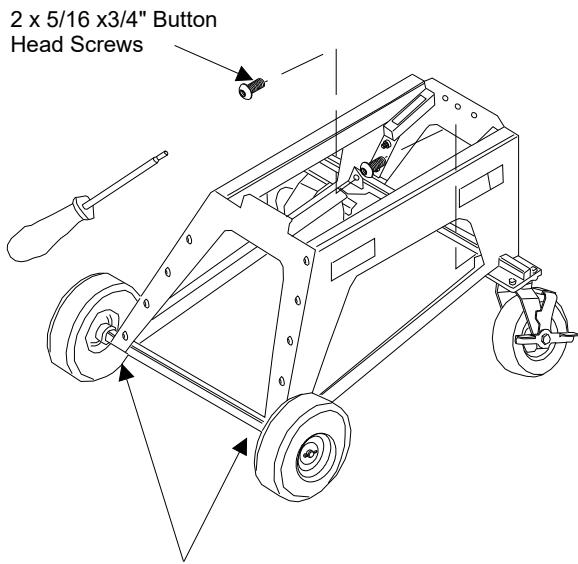

STEP 4

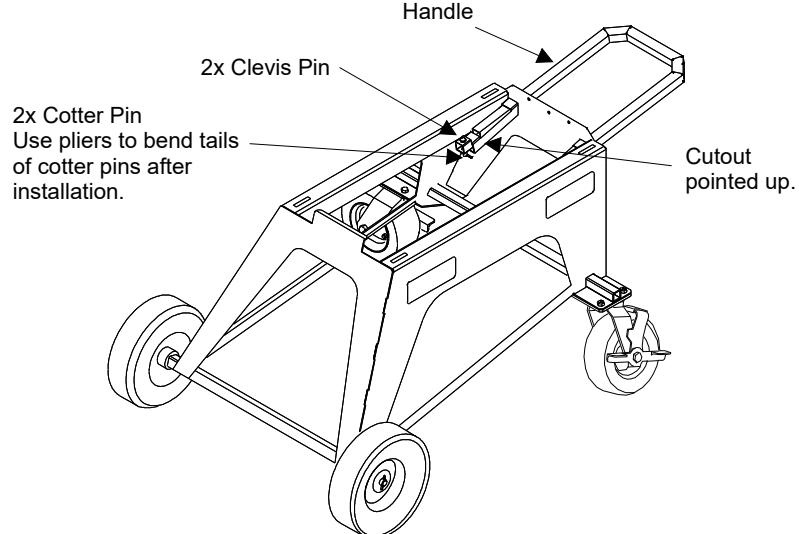

NOTE: Make sure to tighten two screws on the bottom.


Tighten ALL Screws



RS-13011

400-0857-003

PORTABLE STAND FOR HOSE ROLLERS OR RELOADERS.

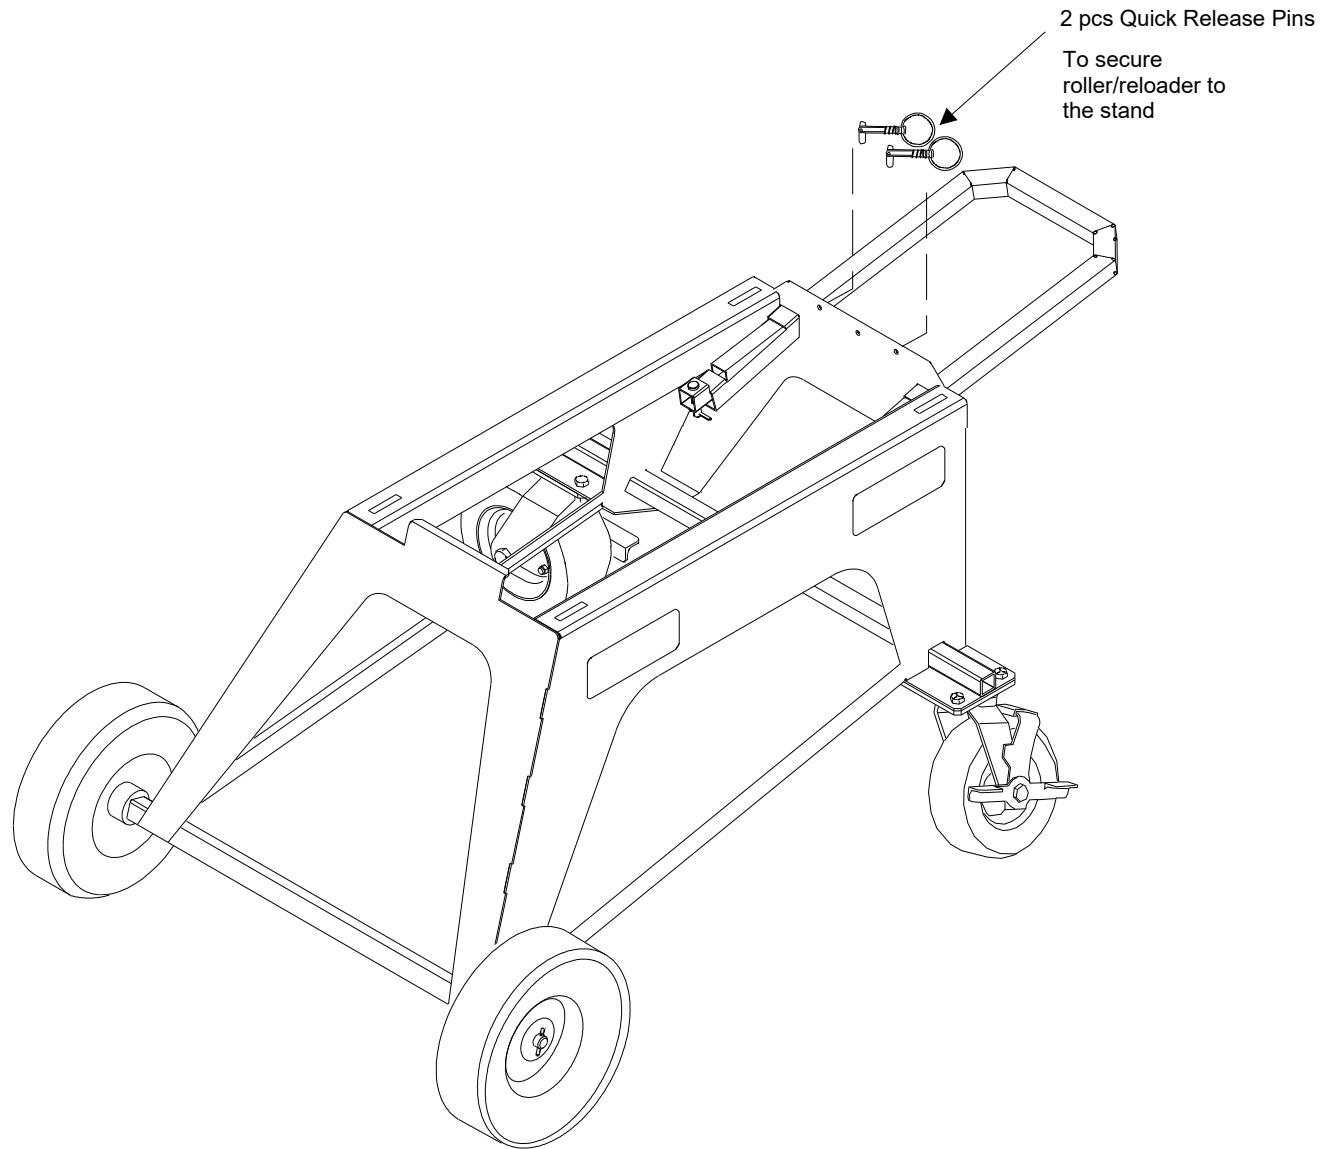

2 pcs Quick Release Pins

To secure
roller/reloader to
the stand




RS-13013


400-0864-001

HOSE RELOADER CRADLE, ASSEMBLY INSTRUCTIONS


PARTS LIST

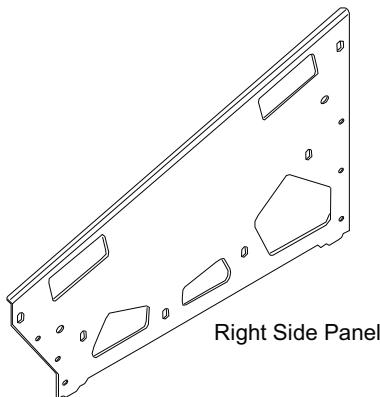


Right Side Panel

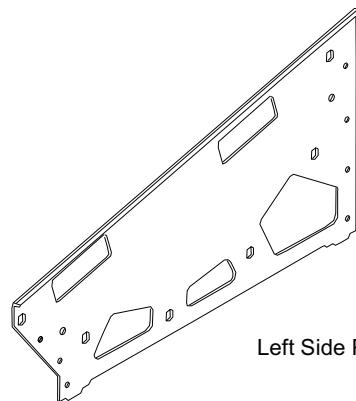


Left Side Panel

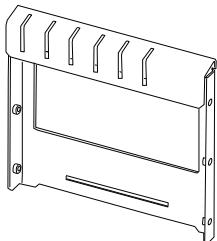


Back Panel

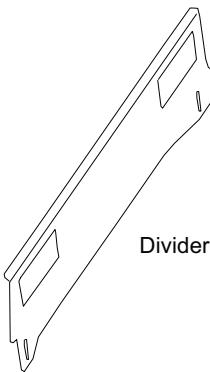


Divider

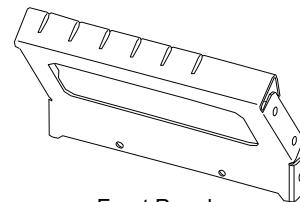


Front Panel

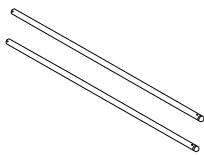


2 pcs Axis

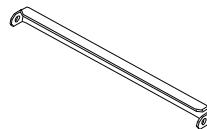


Support Panel

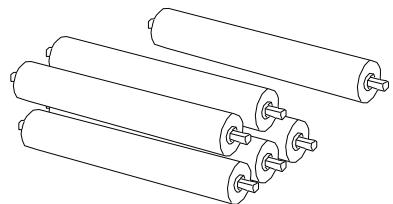


6 pcs Conveyor Roller
(RS-21043)

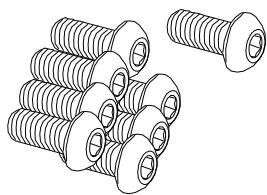


8 pcs 5/16 x 3/4" Button Head
Screws

 

 4 pcs 1/8" diameter x 1" Long
Cotter Pin



4 pcs Washer for
5/16" Screw

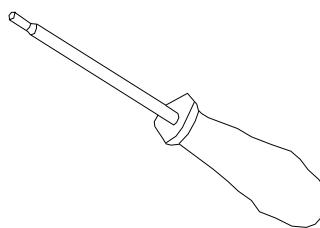

3/16 Allen Hex Screwdriver



RS-13013


400-0864-001

HOSE RELOADER CRADLE, ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS


STEP 1

DO NOT tighten screws

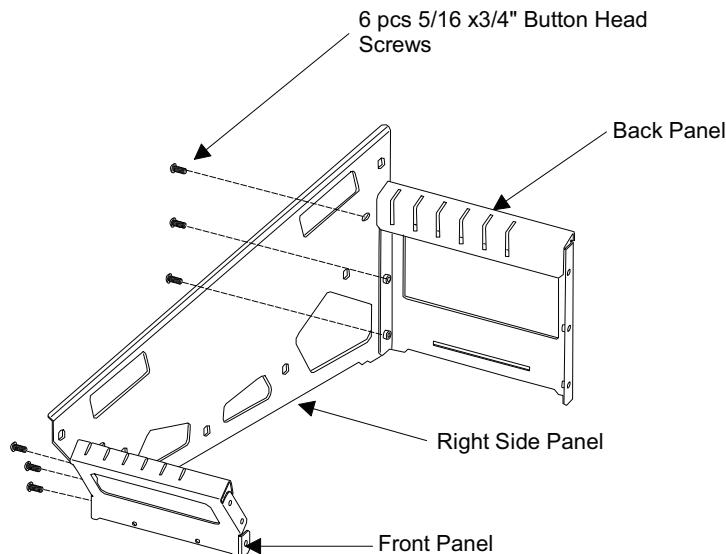


STEP 2

DO NOT tighten screws

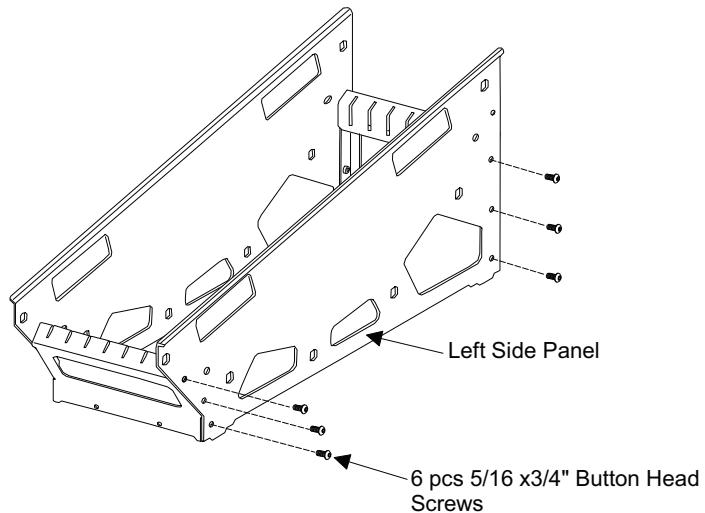


STEP 3

PUSH AXLE ON SPRING SIDE OF ROLLER TO
INSTALL

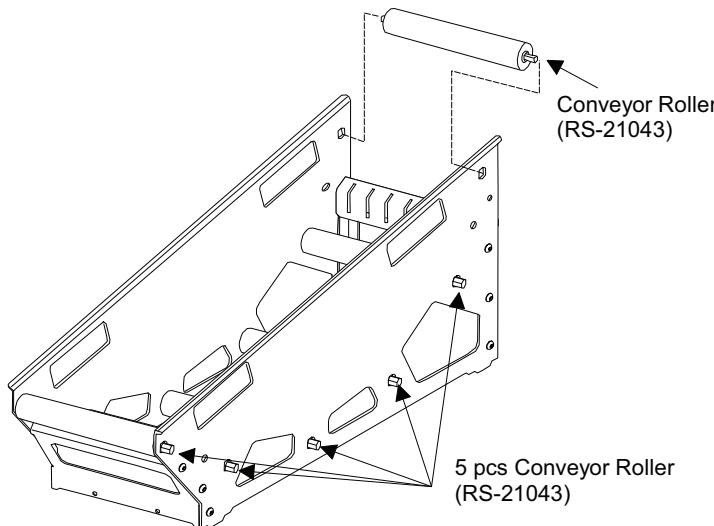


STEP 4

Tighten ALL Screws

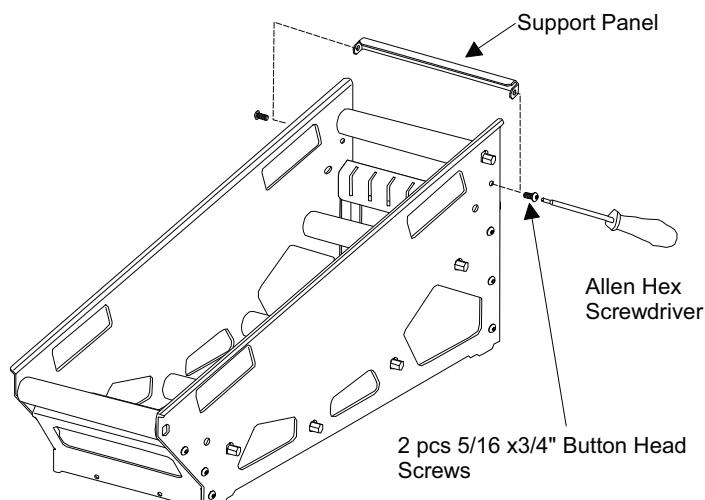



HOSE RELOADER CRADLE, ASSEMBLY INSTRUCTIONS

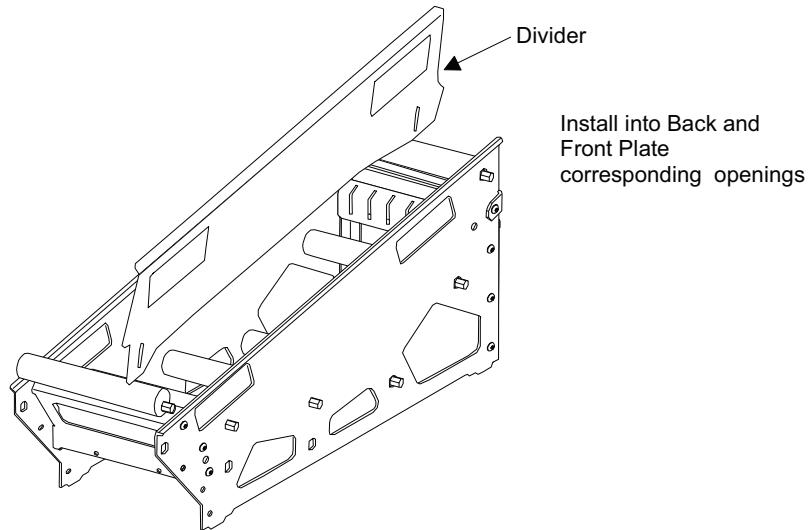ASSEMBLY INSTRUCTIONSSTEP 5STEP 6