




RS-13013

400-0864-001


HOSE RELOADER CRADLE, ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

STEP 5

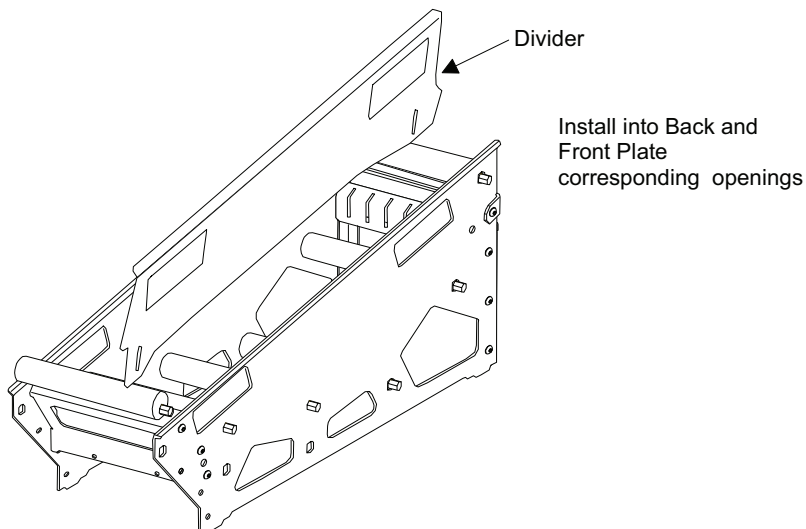

STEP 6

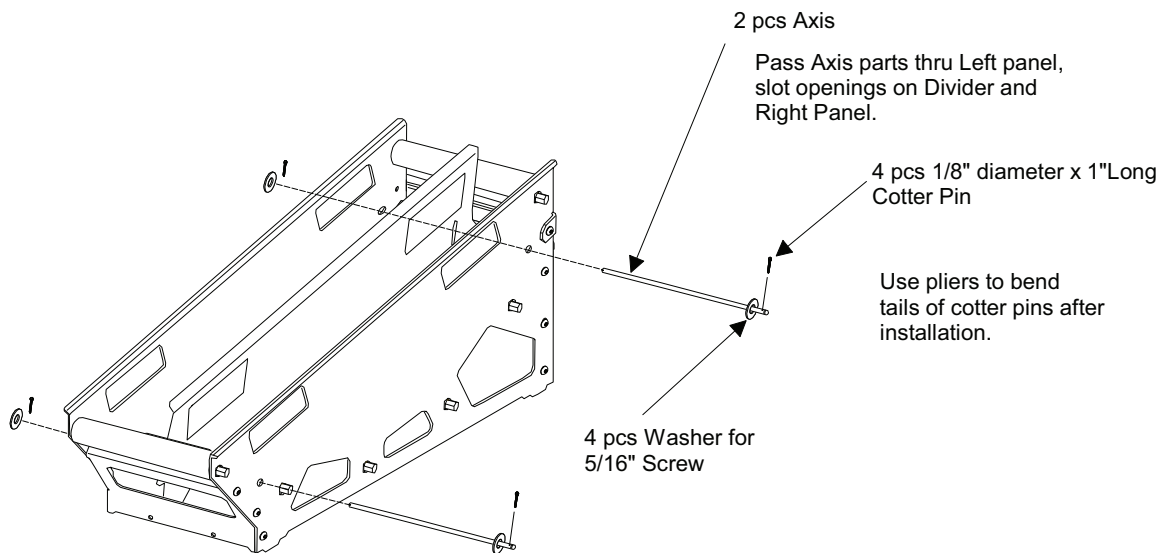



RS-13013

400-0864-001


HOSE RELOADER CRADLE, ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

STEP 1


DO NOT tighten screws

6 pcs 5/16 x3/4" Button Head
Screws

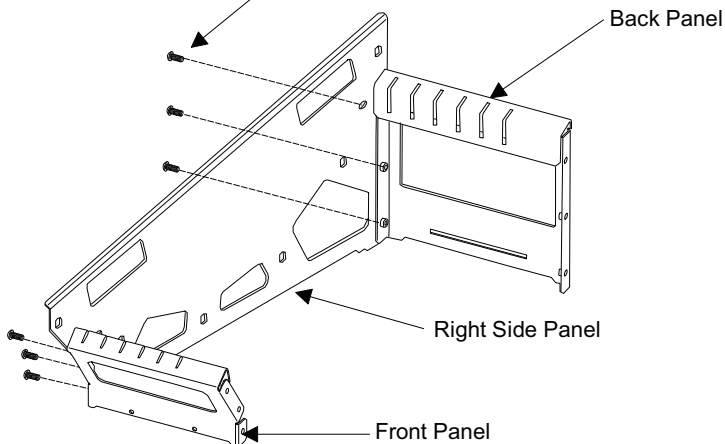


STEP 2

DO NOT tighten screws

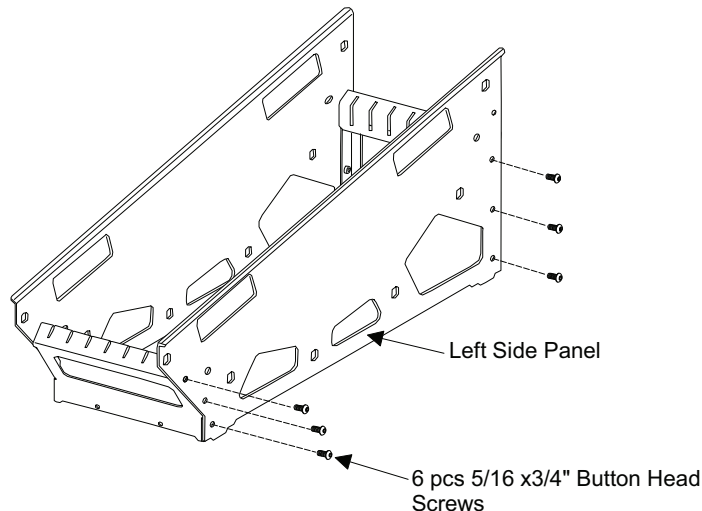


STEP 3

PUSH AXLE ON SPRING SIDE OF ROLLER TO
INSTALL

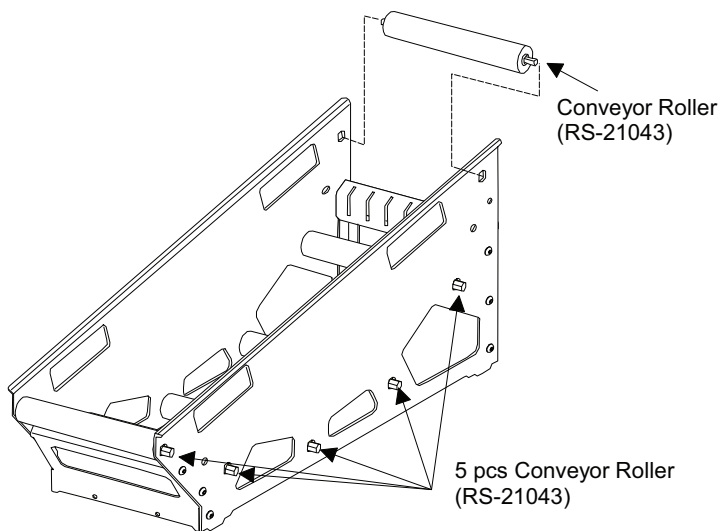

STEP 4

Tighten ALL Screws

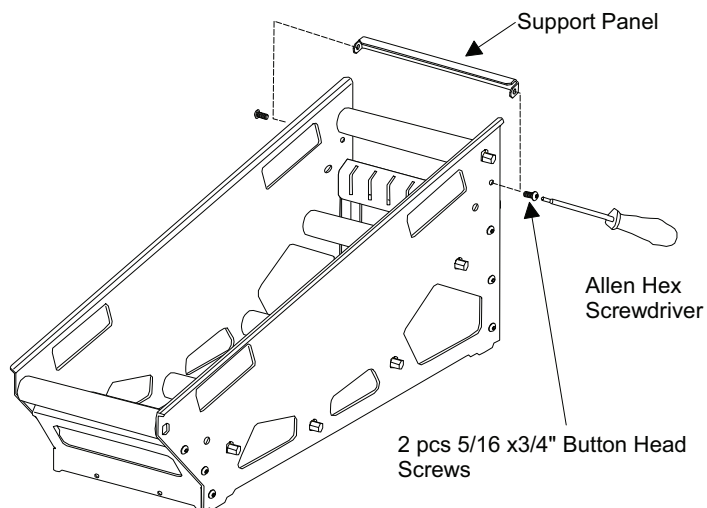




RS-13013


400-0864-001

HOSE RELOADER CRADLE, ASSEMBLY INSTRUCTIONS


PARTS LIST

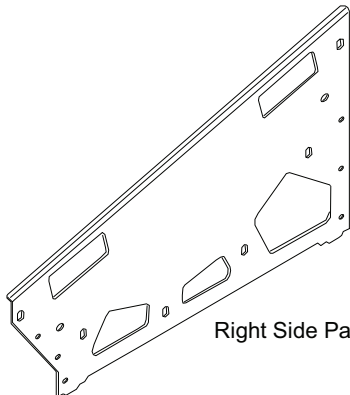


Right Side Panel

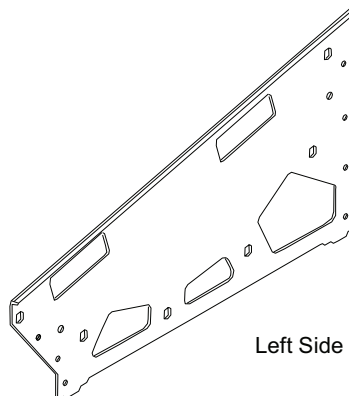


Left Side Panel

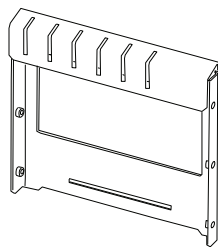


Back Panel

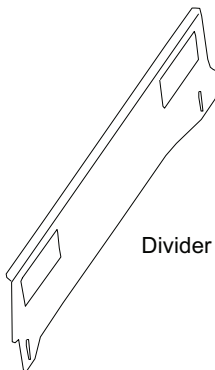


Divider

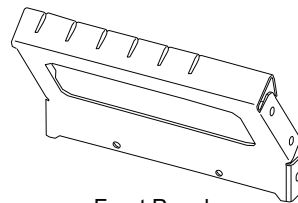


Front Panel

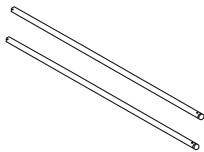


2 pcs Axis

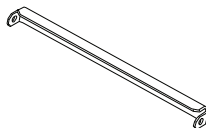

Support Panel

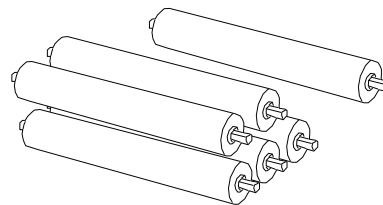


6 pcs Conveyor Roller
(RS-21043)

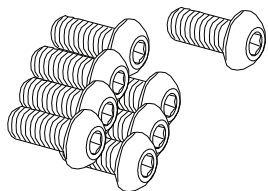


8 pcs 5/16 x 3/4" Button Head
Screws



 4 pcs 1/8" diameter x 1" Long
Cotter Pin



4 pcs Washer for
5/16" Screw

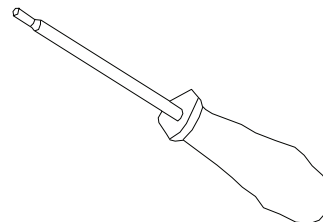

3/16 Allen Hex Screwdriver