

BASIC OPERATION

THE ROOKIE

The front of the Rookie has two lamps and two motor stop buttons. The back has a single power off button.

LOAD HOSE

The START/STOP, SLOW and EJECT buttons are the operator sides.

Load the hose male end onto the roller between the pins and extend the hose away from the roller.

RUN

Press the START button and release. If a hose is detected, rolling starts automatically at full speed.

SPEED

The Rookie runs at full speed and automatically stops when the end of the hose enters the hose guides.

Press the START/STOP button any time to stop the roller.

Press and hold the SLOW button any time to reduce speed but continue rolling or start rolling at slow speed.

FINISH THE ROLL

Press and hold the SLOW button to roll very slowly; release when the nozzle is in its final position.

EJECT

Press the EJECT button to push hose out for removal. The eject button is disabled when rolling.

Once the hose is ejected, place the rubber band around the hose, slide the hose off the roller and place on top of the roller to be removed and stored.

MOTOR STOP – LEFT or RIGHT

After pressing the left or right E-Stop, the lamp flashes red. These buttons stop one motor only. AC power is still on, and the other side can still run.

POWER OFF - E-STOP

The POWER OFF button on the back of the Rookie kills main power to the entire Rookie. Wait at least 2 minutes before resetting the power switch.

LAMPS

There is one lamp for each side of the roller.

Solid Green..... Power is On, Hose is Detected

Flashing Green Power is On, No Hose is Detected

Solid Red Roller is Turning

Flashing Red..... Left or right E-Stop was activated.

Fast Flash Red..... Power or motor error occurred.

Press POWER OFF or unplug for 2 minutes and then restore power.